

## **Error Codes for 721-05, 721-06 and 7228-06**

<b>ERT04</b>	Potentiometer of the hand wheel, best value is 16.
<b>ERT10</b>	Power limit of the backgauge motor, moves too strong or has jammed.
<b>ERT13</b>	Moves against reference instead of limit.
<b>ERT14</b>	Moves against limit instead of reference.
<b>ERT15</b>	Counter signal is missing, defective PCB or broken wire.
<b>ERT17</b>	Counter signal without motor movement, motor turned by hand.
<b>ERT18</b> same	Switch clamp on top S14 and switch knife on bottom S5-2 are activated at time.
<b>ERT20</b>	E-prom is defective.

Dec.05/Ro.