


### **Anleitung zum Entlüften 721LT, 721-05LT, 721-05LT, 7228-06LT**

1. Entfernen Sie die Holzabdeckung an Fußpedal.
2. Fahren Sie das Messer nach unten und schalten Sie den Hauptschalter aus.
3. Lösen Sie mit einem Inbusschlüssel (8mm) die Schraube (1) am Messerzylinder ca. eine Umdrehung. Entfernen Sie den Inbusschlüssel. Schalten Sie den Hauptschalter wieder ein.
4. Bewegen Sie das Messer 3-4 mal nach unten bis Öl and der Schraube herausgepresst wird.
5. Sichern Sie die Entlüftungsschraube (1) wieder. Die Maschine funktioniert nun wieder normal.

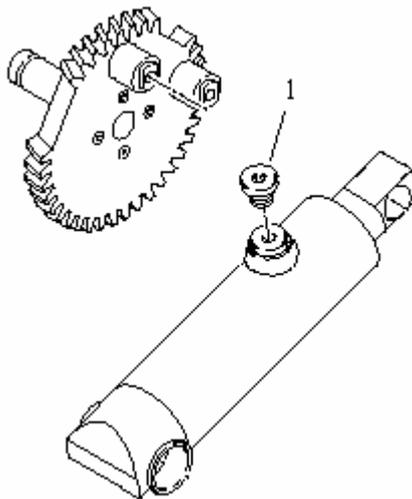

### **Manual for ventilation on the 721LT, 721-05LT, 721-05LT, 7228-06LT**

1. Remove the wooden panel along the foot pedal.
2. Move the knife to the bottom position and turn the main switch off.
3. Release the Allen head screw (1) with an Allen head key (8mm) approx. 1 revolution. Remove the Allen head key. Turn the main switch on again.
4. Cycle the machine 3-4 times until oil leaks out of the screw (1).
5. Lock the Allen head screw (1). The machine should work normally again.

Juli 05/Ro.